



Scope of work for Car Wash Doors and Operators

SECTIONAL DOORS

Inspect section condition	Inspect cables for wear or damage
Inspect alignment of door to insure proper operation	Inspect drums for wear or damage
Lubricate and inspect rollers and bearings	Inspect locks for proper operation
Adjust and lubricate springs/operator assembly	Inspect weather-strip for wear or damage
Inspect spring/operator fasteners for secure mounting	Inspect track fasteners and hangers for secure mounting
Inspect and tighten hinges and hardware	Inspect and lubricate chain hoist

ELECTRIC OPERATORS

Inspect and adjust limit switches	Inspect operator mounting
Inspect and adjust belts	Inspect and test disconnect
Inspect and lubricate roller chain	Inspect and tighten all sprockets
Inspect and adjust brake	Lubricate all bearings
Inspect and adjust clutch	

AIR OPERATORS

Check air pressure. Should be 45 – 80 psi	Add oil to system/automatic oilers
Adjust opening/closing travel speed	Inspect fasteners and hangers for secure mounting
Clean/lubricate cylinders	Inspect and tighten all sprockets and chains
Clean airports/orifices to ensure proper flow	Drain compressor